


## HOW TO CHECK SOFTWARE VERSION

### FEA-2107/FCR-2107

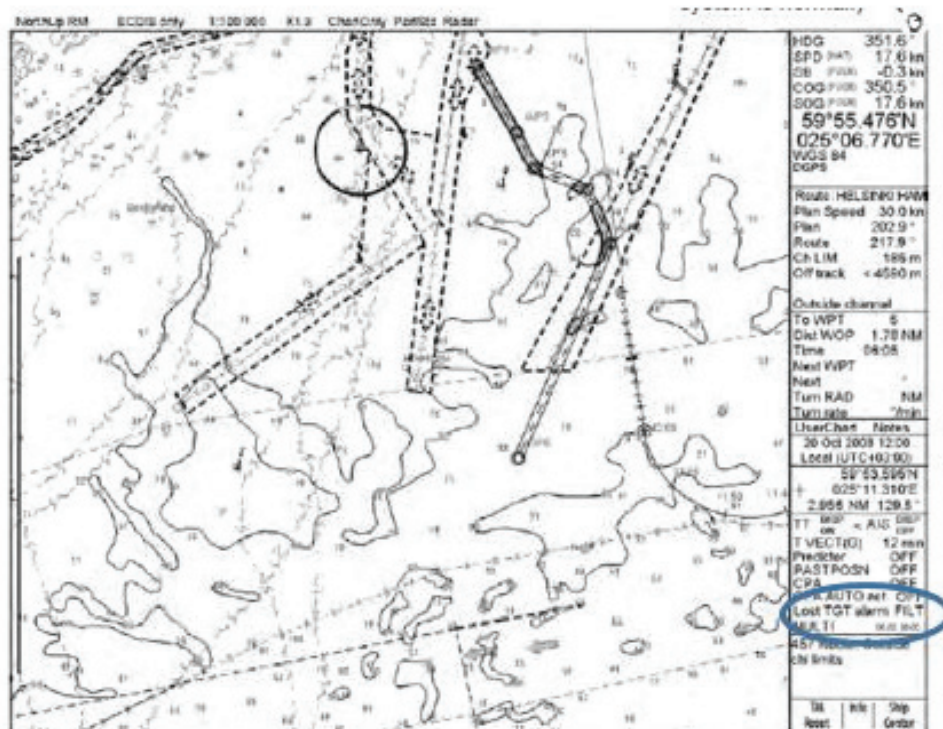

The ECDIS software version number is displayed in the information area, next to the system configuration indication.

iP < AIS DISP  
 OFF  
 T(G) 12 min  
 or OFF  
 POSN OFF  
 OFF  
 UTO act. OFF  
 GT alarm FILT  
**XXXX XXXX** (highlighted with a black circle)