

### How to check software version

#### FMD-3XXX

You can show ECDIS program no., ECDIS system information, and the operator's manual. Click the [?] button on the Status bar then select [Manual] to show the operator's manual, or [About] to show ECDIS and system related information.



On the [About] screen, click the [Version] tab to show the ECDIS software version no., conning software version no., S52 presentation library version, ENC user permit no., and C-MAP SDK software version no. Click the [System] tab to show ECDIS system information: CPU type, RAM capacity, SSD free/SSD capacity and Unified ID.

